

# Inner tent



RAISE THE CENTRAL POLE SLIGHTLY AND THEN PLACE IT INSIDE THE TOP OPENING.

THE FLOOR OF AN INNER-TENT BASE CANNOT BE OPENED.

LIFT UP THE CENTRAL POLE AND PUT IT ON THE REINFORCED AREA IN THE CENTRE OF THE FLOOR.




RAISE THE CENTRAL POLE AND PUT THE REGULATING TUBE HOLDER IN PLACE.




ATTACH THE REGULATING TUBE TO THE HOLDER.



LIFT UP THE INNER TENT.

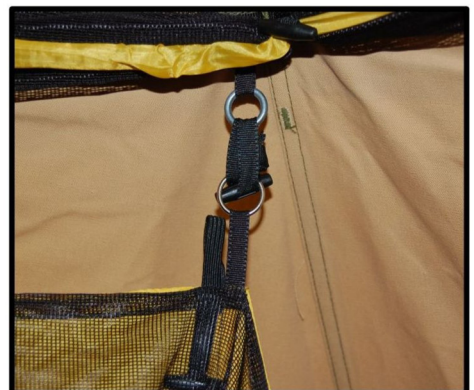

ATTACH THE INNER-TENT TO THE FASTENING POINTS NEAR THE TOP OF THE NORDIC TIPI.

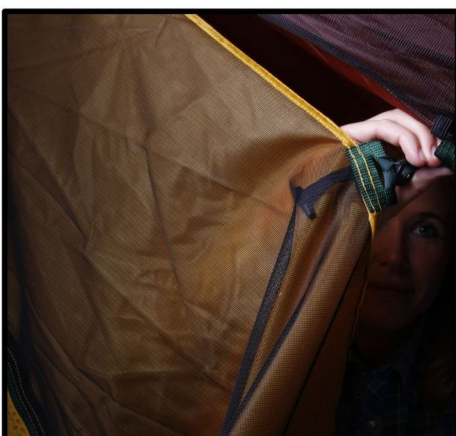

ATTACH IT TO THE WALL, FIRST IN THE MIDDLE AND THEN AT THE BOTTOM.



ATTACH BY PUTTING THE TOGGLE THROUGH THE RING.



STRETCH THE INNER TENT FLOOR BY TIGHTENING THE FLOOR TENSIONERS ON THE OUTSIDE.